

# User Manual



## Dinsafe Control Center

Dinsafe® Series Products User Manual

Designed for home and business security.  
Easy to setup and use with Magictrl™.

World famous expert of smart-home alarm system  
Perfectly match all Android and iOS smart phones.


# MENU

- Connect & Setup P2
- Pairing and managing accessories P3
- Normal Settings - Emergency Contact P4
- Normal Settings - Clock and Other Settings P5
- Advanced Settings P6
- Check logs & events P7
- Upgrade Firmware P8

# Connect & Setup

## Download & Install DCC™ (Dinsafe Control Center)

- Visit <http://dinsafe.com/Support-upgrade.html> to get the latest DCC™.
- Please make sure your PC has installed .Net Framework 4 or later version.
- Double-click the downloaded executable file to start installation.
- During the installation, you would be asked to install a CH34X driver. Remember to install the driver because DCC™ could not connect to the main panel without this driver.

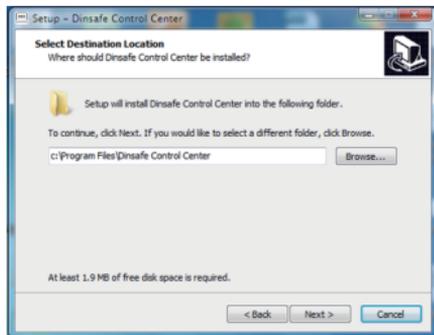

### Dinsafe Control Center

After installation, you  
could find DCC™'s icon  
on your desktop.


## Connect your main panel to PC

- Open the back cover of main panel. Shut down the main panel.
- Use microUSB cable to connect your PC to the power interface of main panel.
- Power up main panel, launch DCC™ on your PC.


DCC™ (Dinsafe Control Center) only works on Windows XP or later version. If you're using Windows XP, you might need to install .Net Framework 4 or later version.

# Pairing and managing accessories

## Pairing accessory by triggering

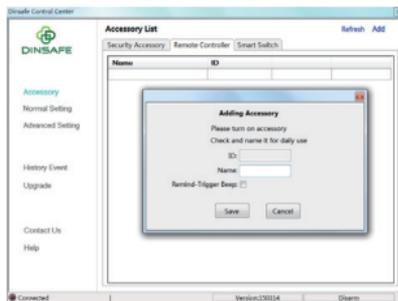


① In DCC™ - [Accessory], click [Add]. Main panel will monitor all signals triggered by accessory.

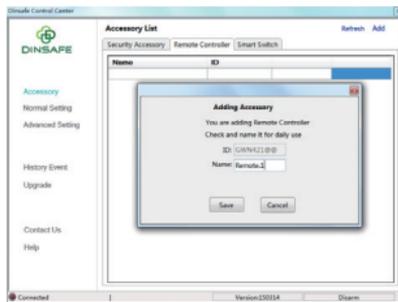

② Trigger one accessory each time, when the ID is recognized, rename your accessory and save.

## Modify accessory setting

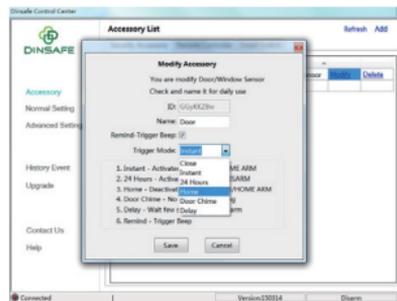

You can easily change the trigger modes of your accessories. Just click [Modify] and adjust one by one.


*Smart Devices like MatiSight™ or Smart Switch should be paired by app.*

# Normal Settings - Emergency Contact

## Setup Emergency Contact



① If you haven't setup any emergency contact in main panel, DCC™ will guide you to set it.

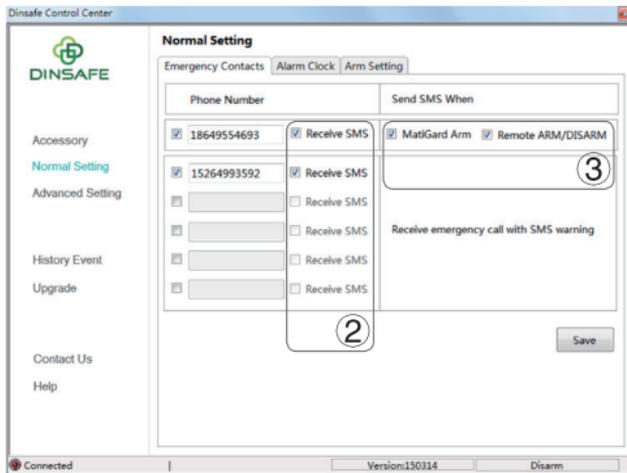

② There are up to 6 emergency contacts could be set. All contacts will receive phone calls when alarm triggered, and only those checked the [Receive SMS] would receive alarm text message.


③ To save the SMS cost, only the first contact could receive arming notification from both main panel or remote controller.

*Don't forget to click [Save] to apply setting.*

# Normal Settings - Clock and Other Settings

## Setup Alarm Clock


- There are 4 set of alarm clocks for setting.
- Each alarm clock has 4 modes. Here [Workday] means the alarm clock will be active from Mon. to Fri.

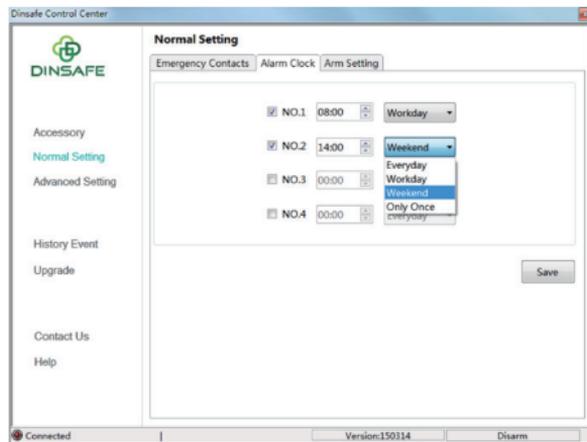

## Arm Setting

You can do some arming related settings here.

- Adjust build-in siren time and the speaker volume.
- Adjust the time setting for delay alarm or delay arming.
- Turn on/off the new features like Knock over to SOS or Ready to ARM.
- Setup a safe temperature range for main panel, system will inform you when surrounding temperature exceeds the limit.

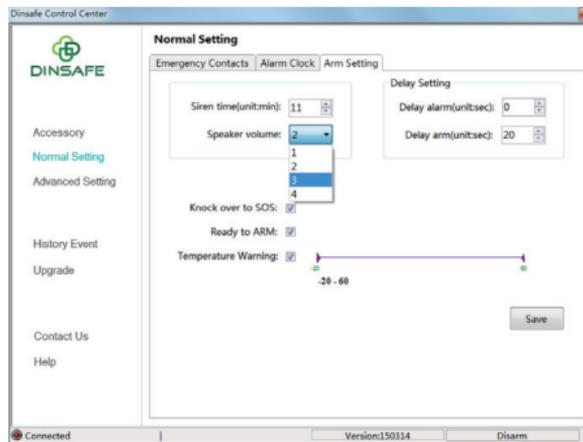

*If the time on main panel is in error. Please use Magictrl™ to initialize it. The system time will be synchronized with your phone after initialization.*

# Advanced Settings

## Arming/Disarming Schedule

- Up to 6 sets for automatically ARM/DISARM/HOME ARM.

## Password Setting




- Change the passwords for Administrator or Users.
- Once the password is modified, app users should redo the initialization process in Magict1™ for continue using.

## SMS Forward

- By tuning this feature on, MatiGard™ will forward SMS from the contact you filled here to the first emergency contact.

## System Language


- MatiGard™ supports global languages, select language here to change the MENU and SMS's language.

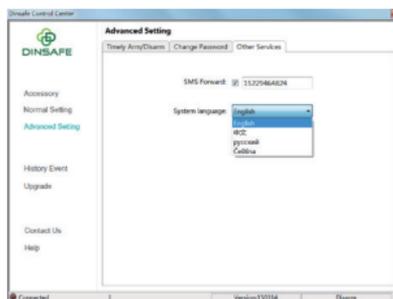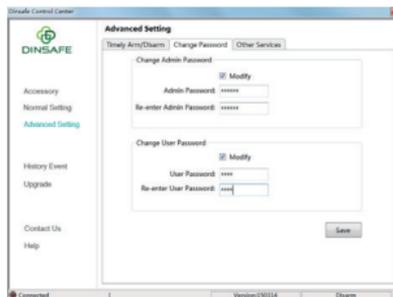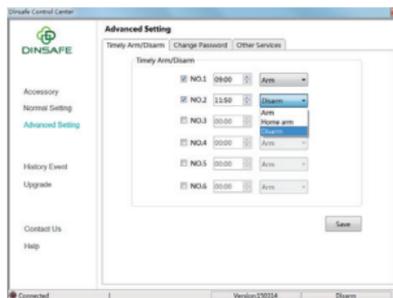

# Check logs & events

## Check and view history events

• DCC™ would read all history events and sort them by time.

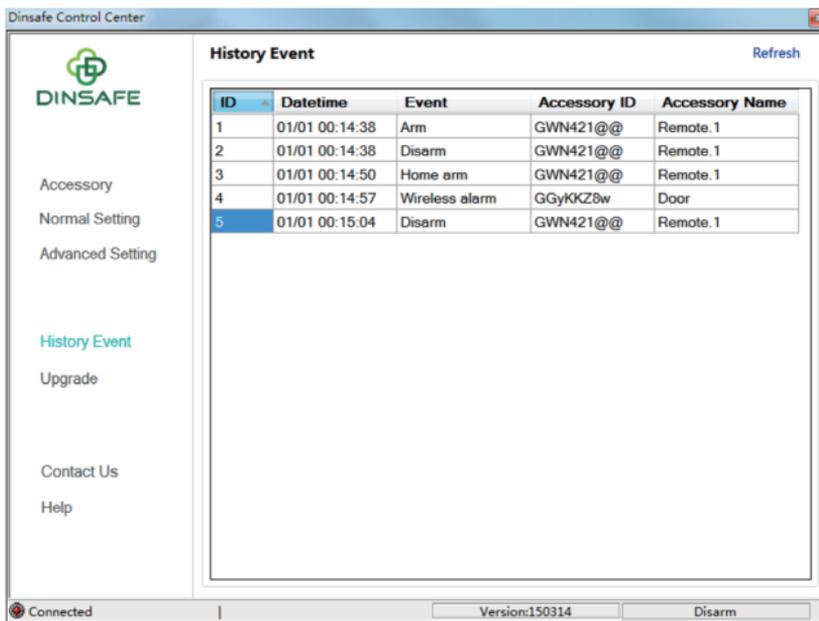

The screenshot displays the Dinsafe Control Center interface. On the left is a navigation menu with the DINSAFE logo and options: Accessory, Normal Setting, Advanced Setting, History Event (highlighted), Upgrade, Contact Us, and Help. The main area is titled 'History Event' and includes a 'Refresh' button. It contains a table with the following data:

ID	Datetime	Event	Accessory ID	Accessory Name
1	01/01 00:14:38	Arm	GWN421@@@	Remote.1
2	01/01 00:14:38	Disarm	GWN421@@	Remote.1
3	01/01 00:14:50	Home arm	GWN421@@@	Remote.1
4	01/01 00:14:57	Wireless alarm	GGyKKZ8w	Door
5	01/01 00:15:04	Disarm	GWN421@@@	Remote.1


At the bottom of the window, there is a status bar showing 'Connected', 'Version:150314', and 'Disarm'.

# Upgrade Firmware

## Get the latest firmware

- Visit <http://dinsafe.com/Support-upgrade.html> to get the latest Firmware. Please confirm the type of your main panel.
- There are different firmwares for MatiGard Air and MatiGard X.
- The firmware is in ZIP file format, please do not uncompress it.


## Use DCC™ to upgrade firmware

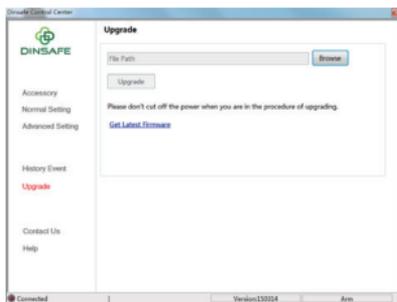

- ① In DCC™ - [Upgrade], click [Browser] to select the right firmware.



- ② Click [Upgrade] for updating, the process will last from 3 mins to 20 mins. Don't cut off main panel's power until you see the confirming notification.

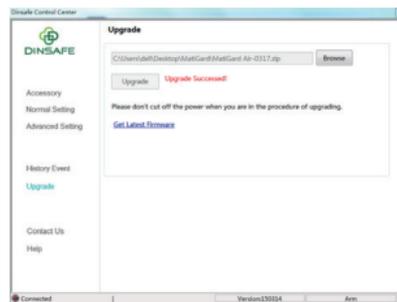

- ③ Now your MatiGard is up to date. Enjoy it!

*If there's any error occurs during the upgrade process, please re-upgrade again.  
If it still fails, please contact your supplier for fast support.*



Available on the iPhone

**App Store**



ANDROID APP ON

**Google play**

*<http://din.bz/m>*



 **MatiGard™**

Dinsafe®, MatiGard™, Magictrl™ are trademarks of Dinsafe Ltd. ©2015. All rights reserved.

Website : [www.dinsafe.com](http://www.dinsafe.com) E-mail : [info@dinsafe.com](mailto:info@dinsafe.com)

